

Upper Button Repair Instructions for Integrated Telescopic Wands



(Upper button cover, flat button, pin & small spring)



Insert a screw driver under the upper button cover and pry open the button cover.



Use the screw driver to remove the pin that holds the button in place. All 4 pieces should be removed.



Attach the new spring over the nub on the flat button. Align the holes on the flat button with the hole in the plastic housing. Push the pin through the holes to lock the button in place.



Place the new button cover over top of the button lever and snap into place.

Lower Button Repair Instructions for Integrated Telescopic Wands



Button cover, Button Lever, Spring & Metal Clip



Insert a screwdriver under the button cover and pry open to remove all 4 pieces. (Button cover, button lever, spring & metal clip)



Set the new button lever in place and insert the new metal clip inside the square hole.
Please note: The metal clip should be positioned with the rectangular tabs touching the side of the button.



Place the new button cover over top of the button lever and snap into place.